


**Schublade 1700 / Montagesatz mit 13H9790**  
**Drawer 1700 / Assembly-kit with 13H9790**  
**Tiroir 1700 / Assemble-kit avec 13H9790**



# **ASSEMBLY INSTRUCTION**

**Montageanleitung • Instructions de montage**

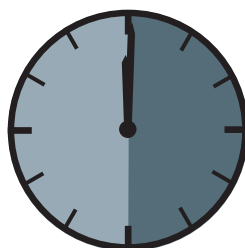

**90 Minuten**

**article-no:**  
006085 black Steel

**Revision 11: 27.03.2024**




# Schublade 1700 / Montagesatz mit 13H9790

## Drawer 1700 / Assembly-kit with 13H9790

### Tiroir 1700 / Assemble-kit avec 13H9790


#### Required tools / Benötigte Werkzeuge / Outillage requis

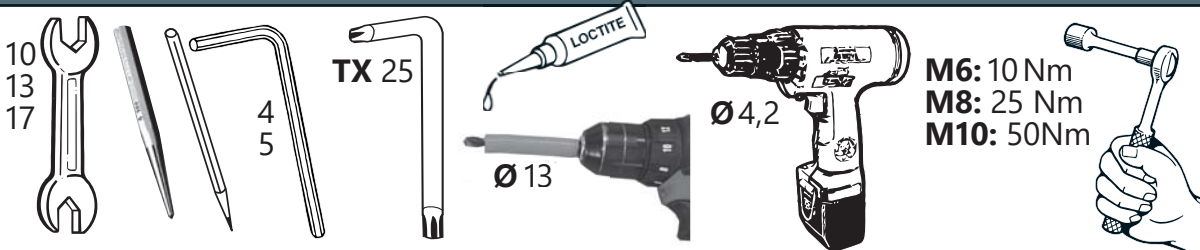

**M6:** 10 Nm  
**M8:** 25 Nm  
**M10:** 50Nm



#### Parts list/Teileliste/Lista de accesorios

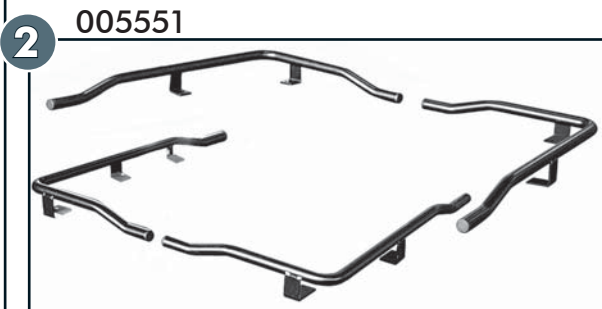

<b>a</b>		ø5,5x25; DIN 7976	<b>2x</b>
<b>b</b>		M6x30; DIN 7991	<b>14x</b>
<b>c</b>		M6x12; ~ISO7380	<b>10x</b>
<b>d</b>		M6x25; ~ISO7380	<b>8x</b>
<b>e</b>		M6x20; DIN 933	<b>2x</b>
<b>f</b>		M8x20; DIN 933	<b>2x</b>
<b>g</b>		M6 weld nut/Anschweißmutter/ soudure écrou	<b>10x</b>
<b>i</b>		ø6,4; DIN 9021	<b>6x</b>
<b>m</b>		M6; DIN 985 Zn	<b>2x</b>
<b>n</b>		M6; DIN 934 Zn	<b>14x</b>

**8** ø9; 005497 **2x**    **9** ø6,6; 005495 **14x**



**\*without bedliner**  
**ohne Laderaumwanne**  
**sans doublure de caisse** **!**

**article-no:**  
 006085 black Steel

**Revision 11: 27.03.2024**



**5** M10; 10V5044 **4x**    **6** ø13; 1855057 **2x**



**7** ø11; 005493 **8x**    **10** ø13; 13H5769 **2x**




**11** 13H5781 **1x**











<b>o</b>		M10x60; DIN 933	<b>2x</b>
<b>p</b>		M10; DIN 934	<b>4x</b>
<b>q</b>		M10x75; DIN 933	<b>2x</b>

**12** 13H5782 **2x**

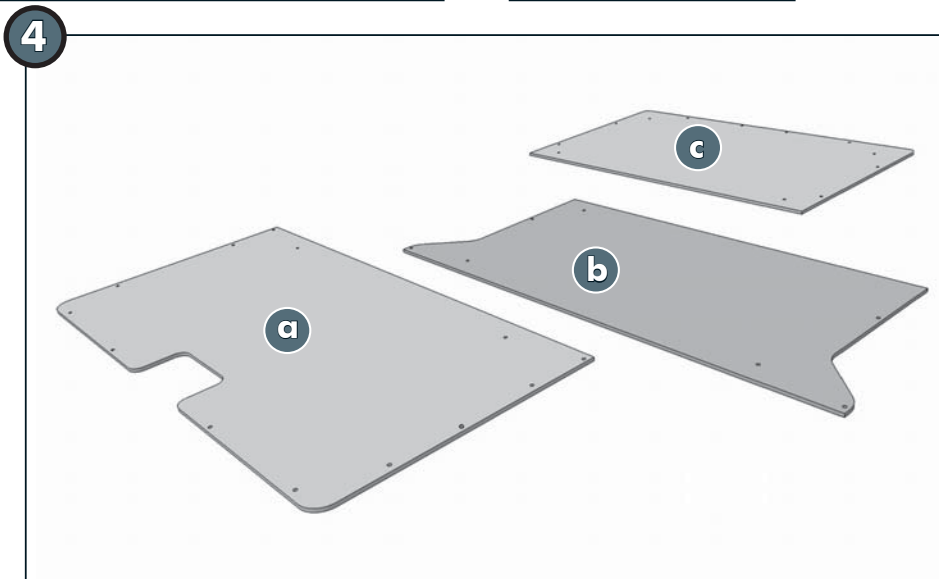









Artikel-Nr. Item-Nr. numéro d'article	KFZ Hersteller auto- motive manufacturer constructeur automo- bile	Bezeichnung designation désignation	Modell model modèle	Holzauflagen timber vehicle part exigences bois
15V5690N 15V5590N	Ford	Ranger Extrakabine (Extra Cab) Ranger Extra Cab (XC)	2012 2016	007770N 007788N
11E5490N	Toyota	Hilux Xtra Cab	2016	007790N

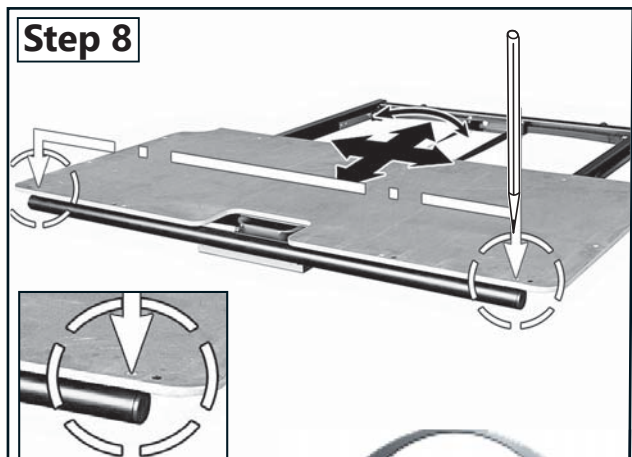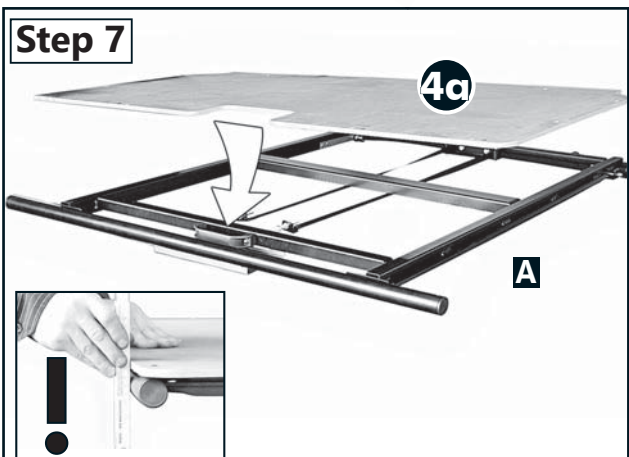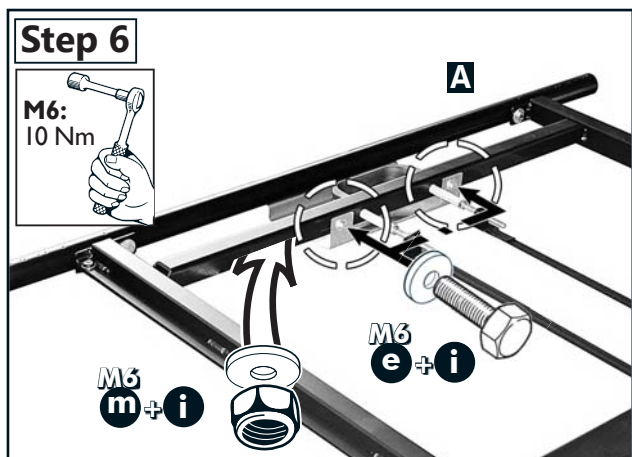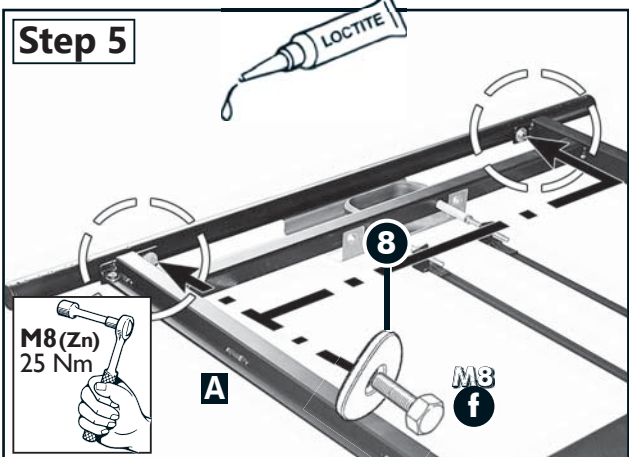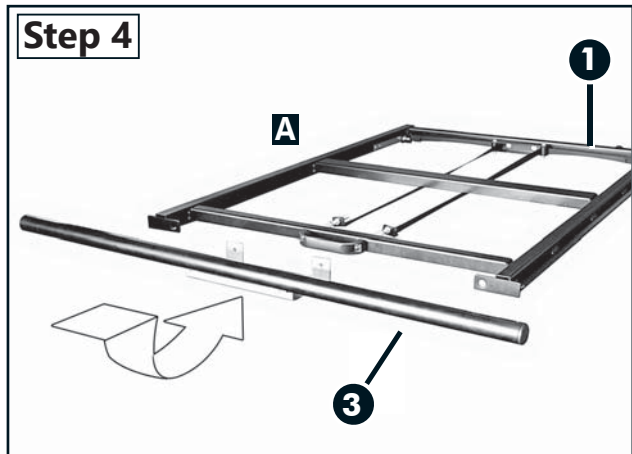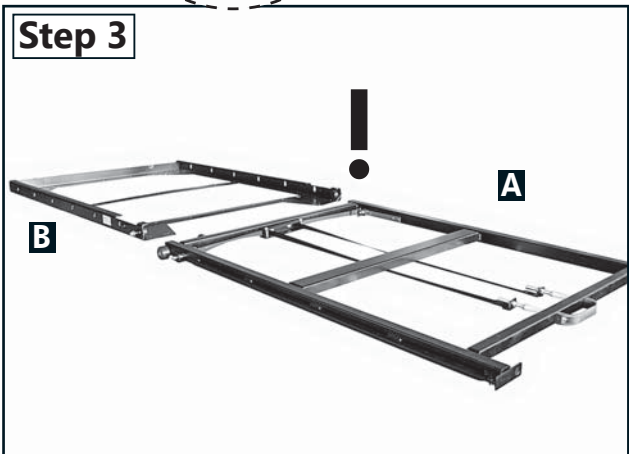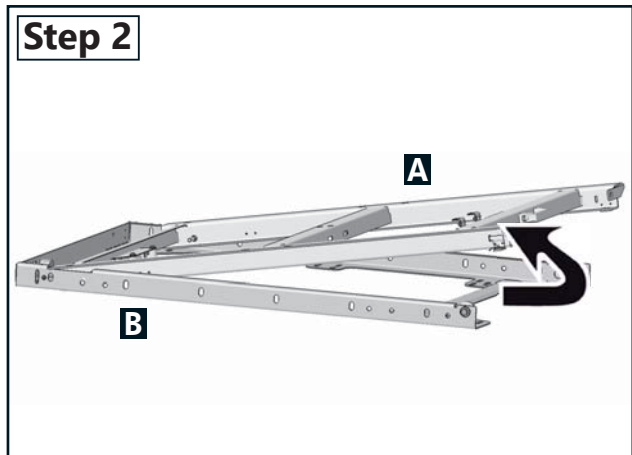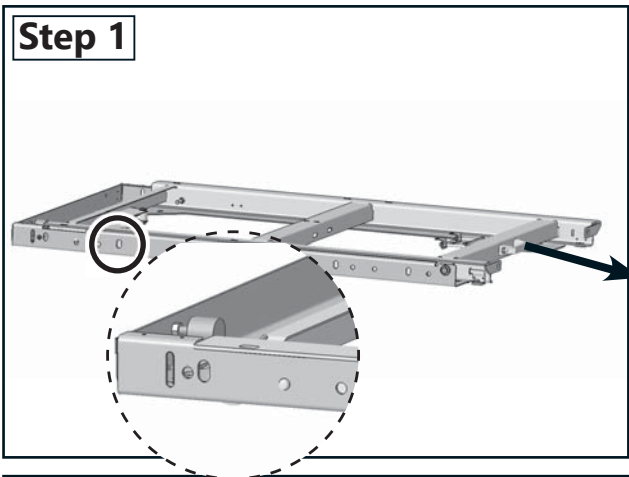

**article-no:**  
006085 black Steel

**Revision 11: 27.03.2024**










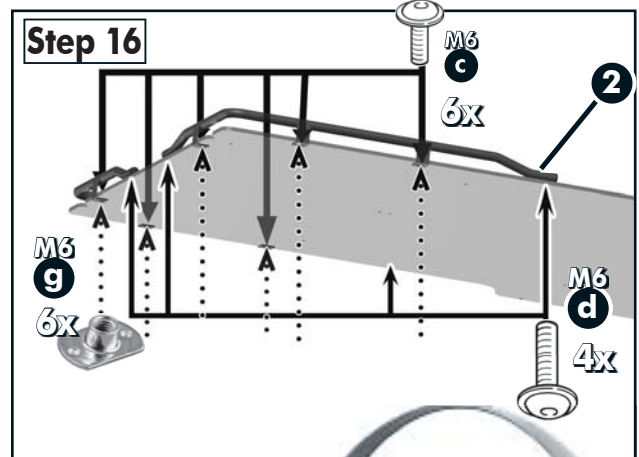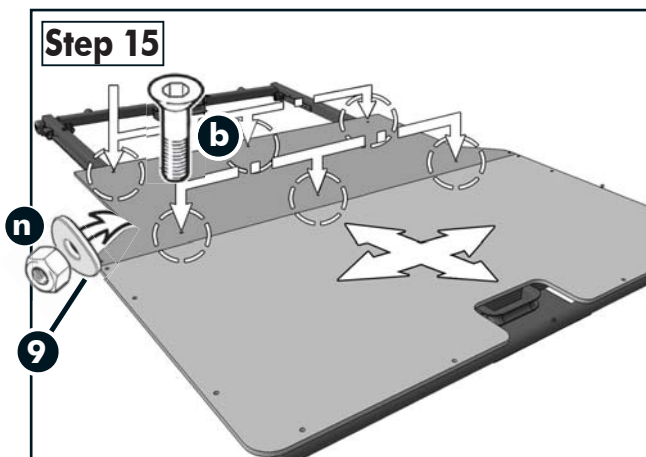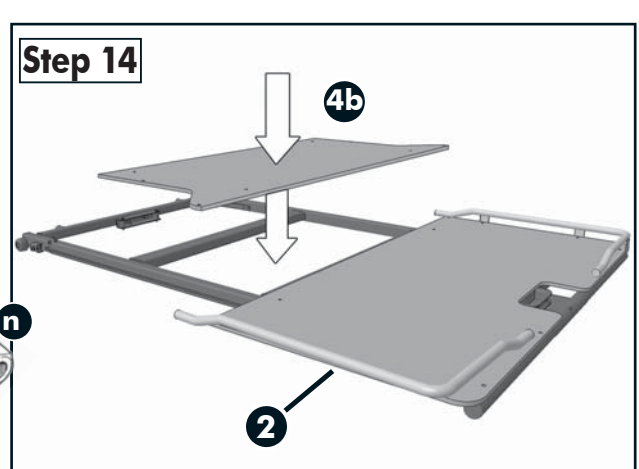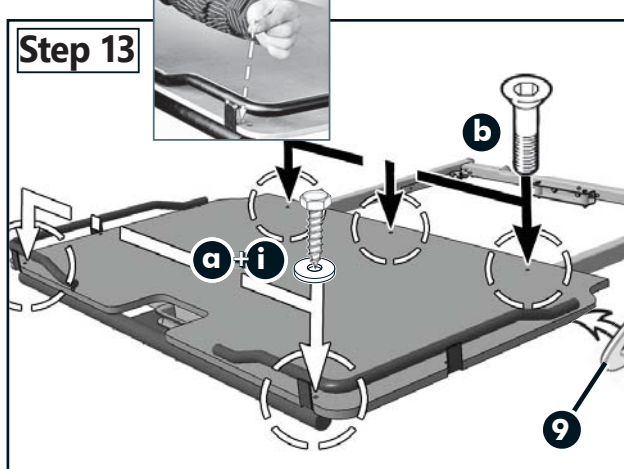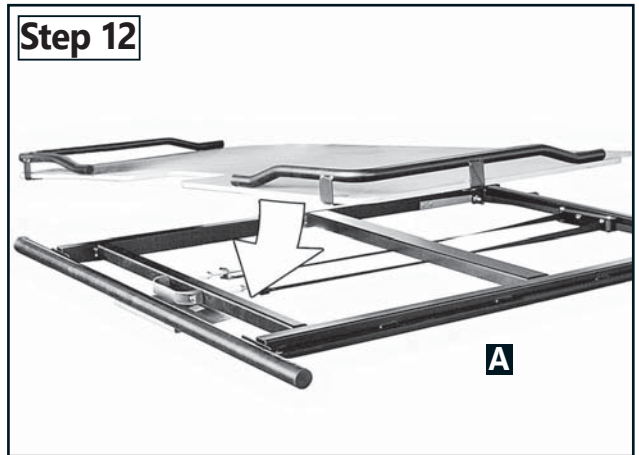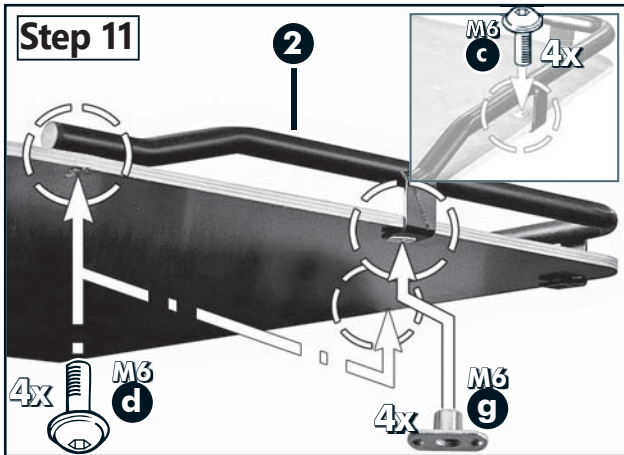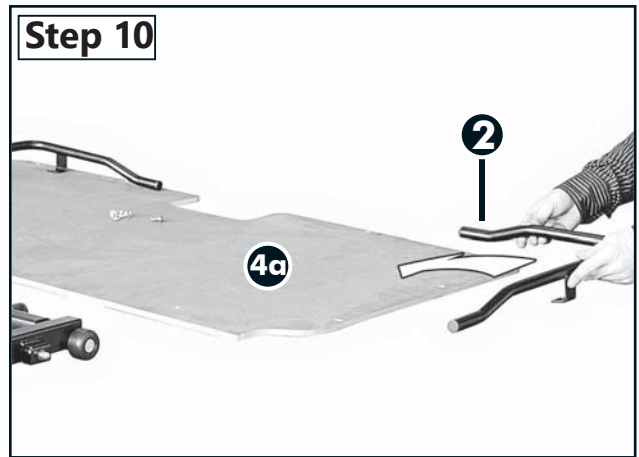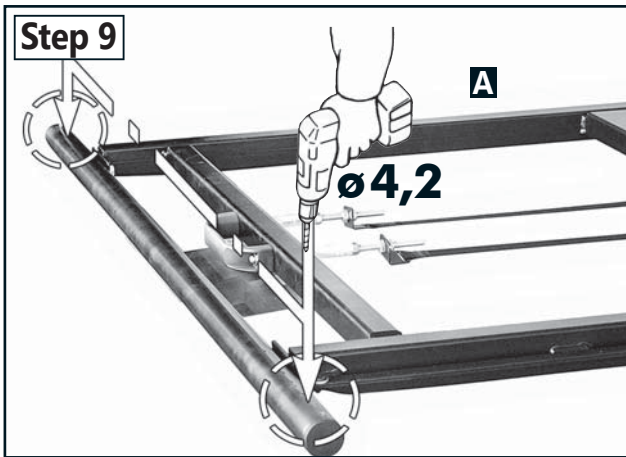

**article-no:**  
006085 black Steel





**Revision 11: 27.03.2024**







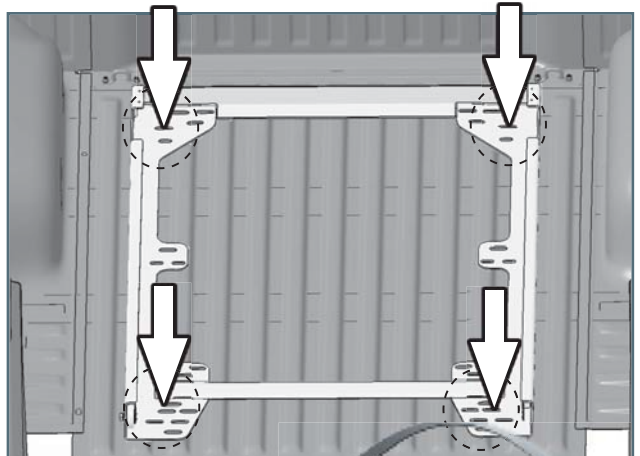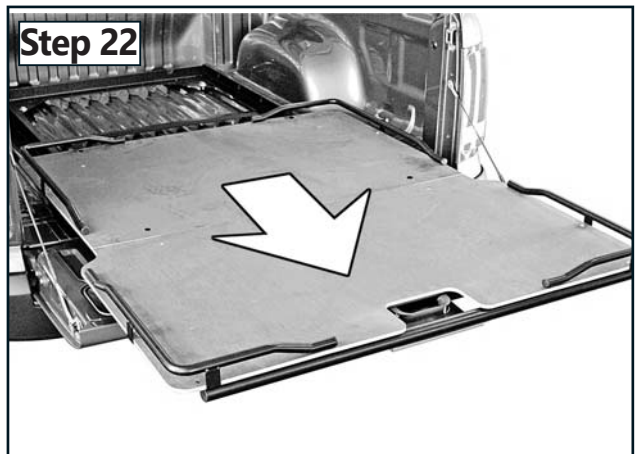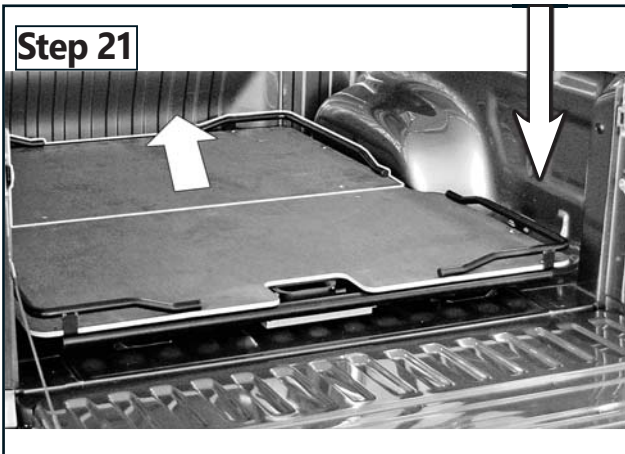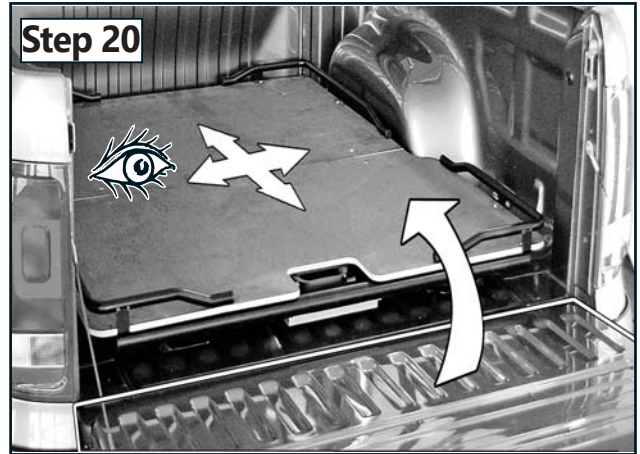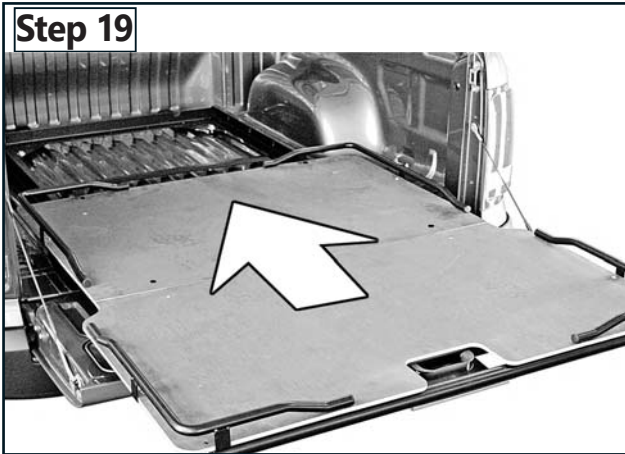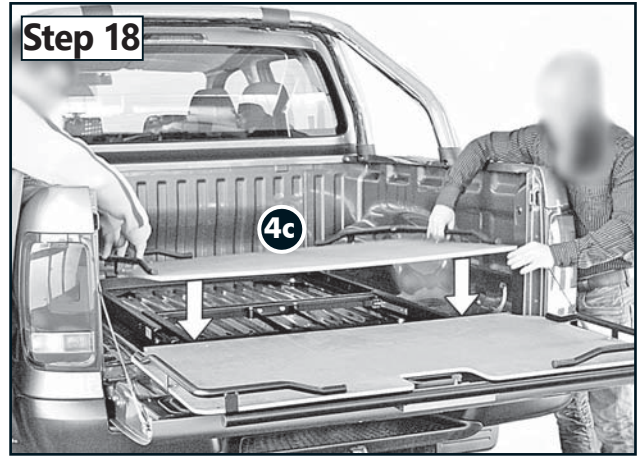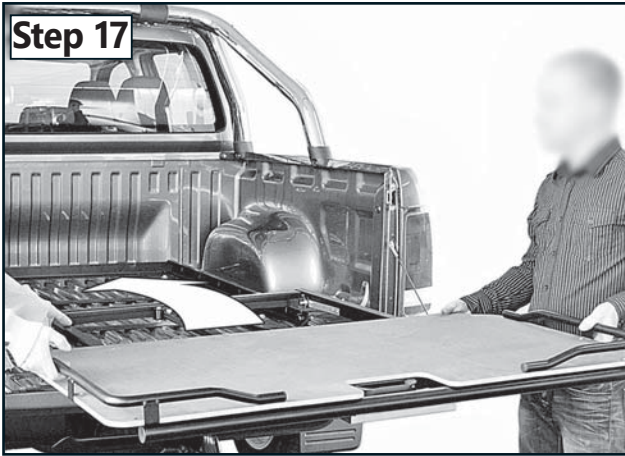

**article-no:**  
006085 black Steel    **Revision 11:** 27.03.2024



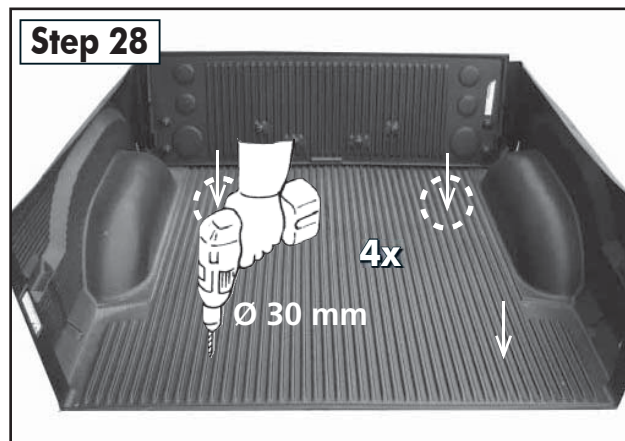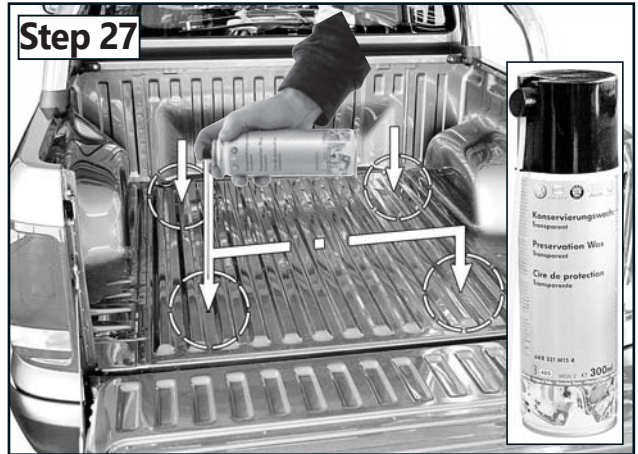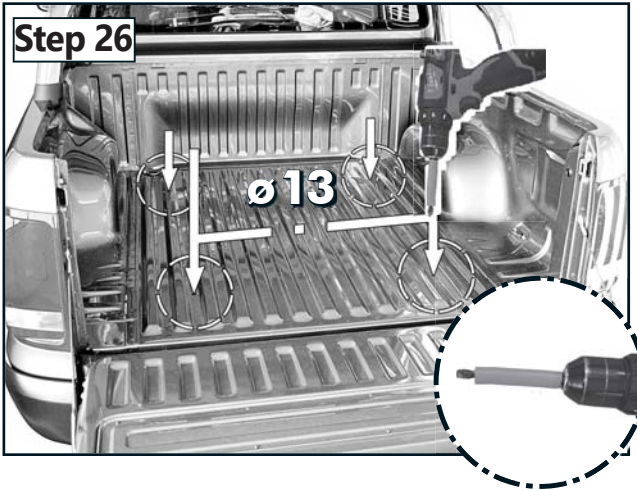
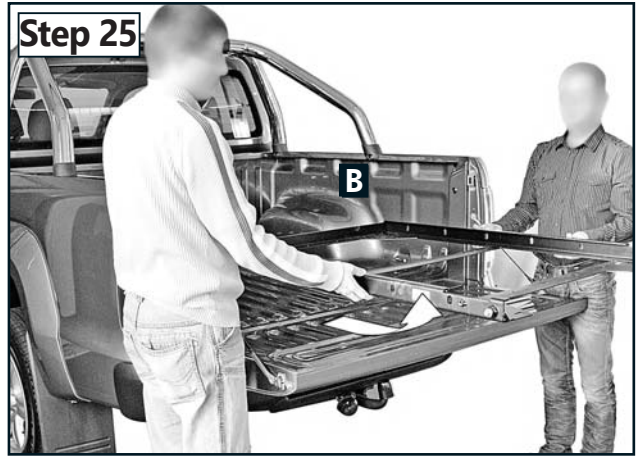


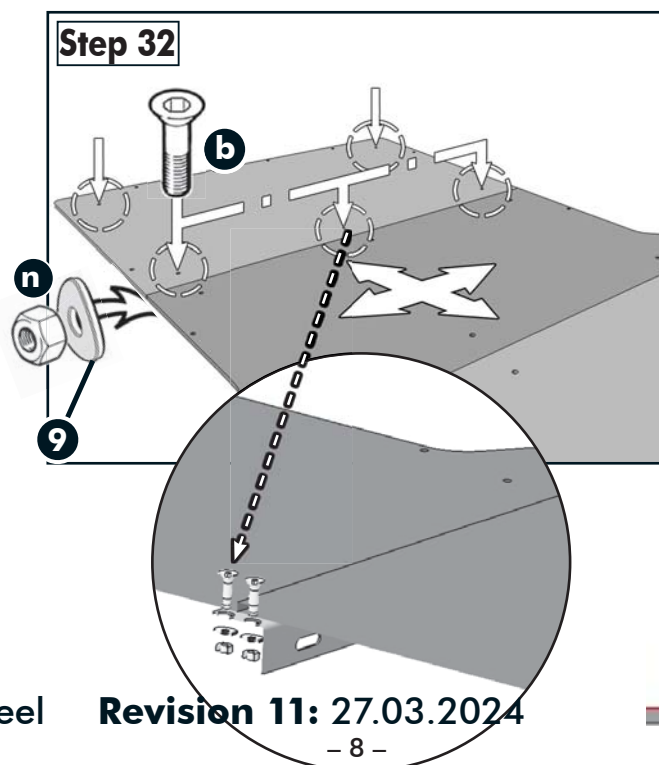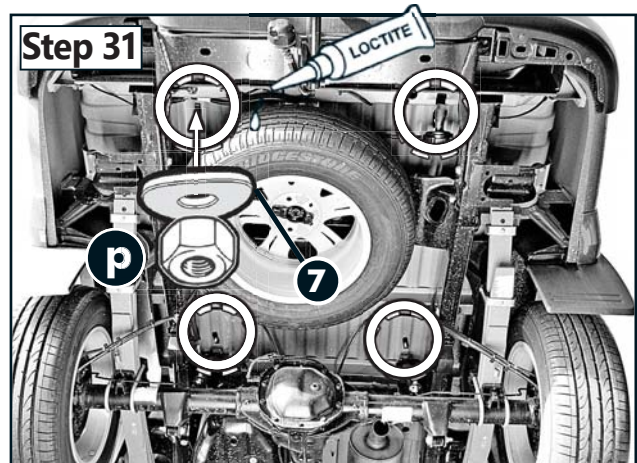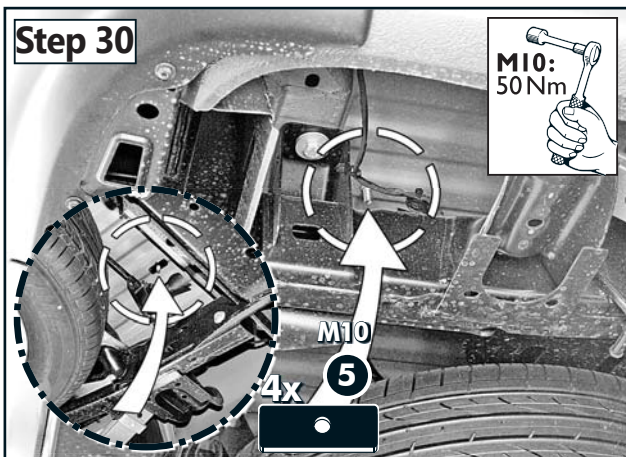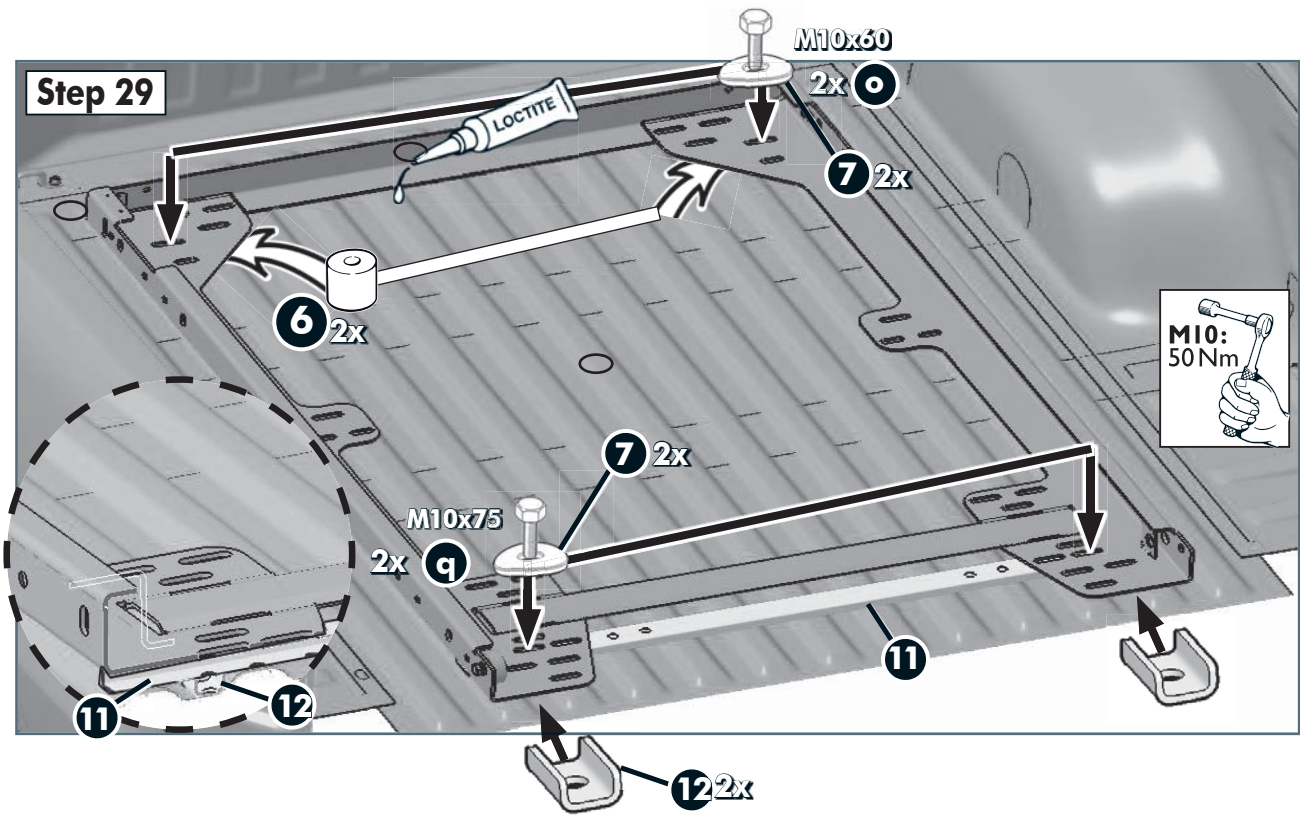

**article-no:**  
006085 black Steel

**Revision 11: 27.03.2024**



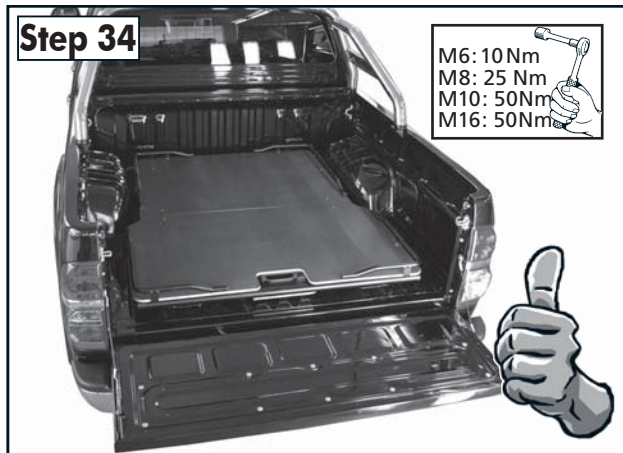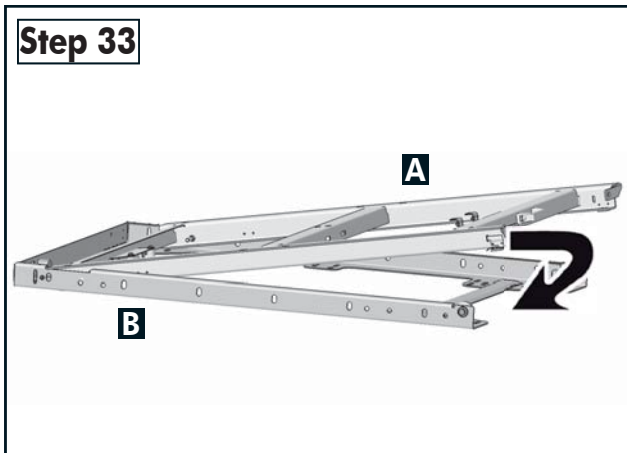

**350 kg  
max**

