

**18C**  
**4038**

## VW T6, Modell 2015

Heckstoßstange 60mm


Rear Bumper 60mm

Pare-chocs arrière 60mm



# ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

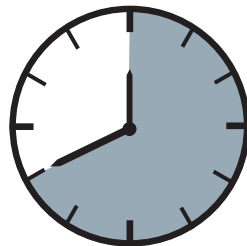

40 Minuten







### Artikel-Nr:

18C4038 Stainless Steel

18C5038 Steel black

Revision 1: 18.01.2016



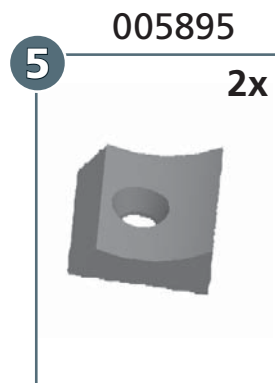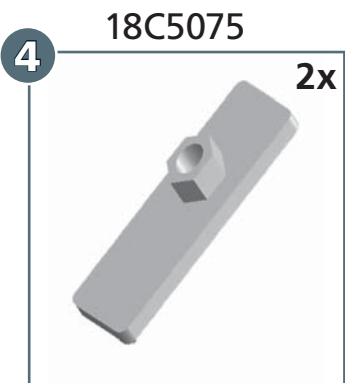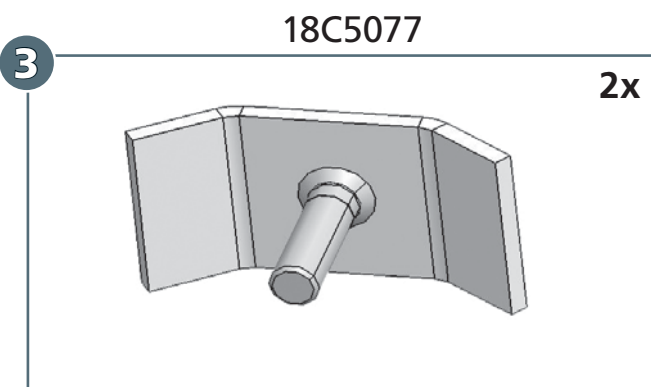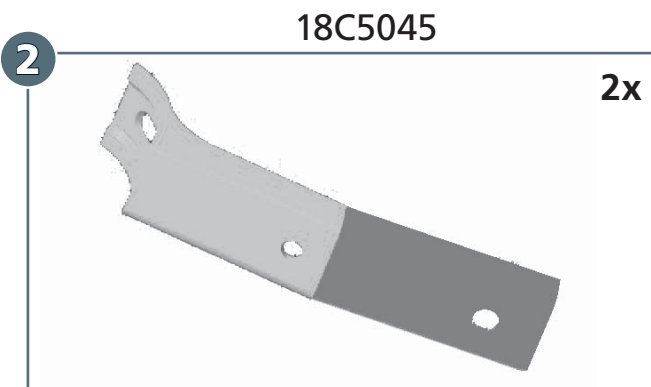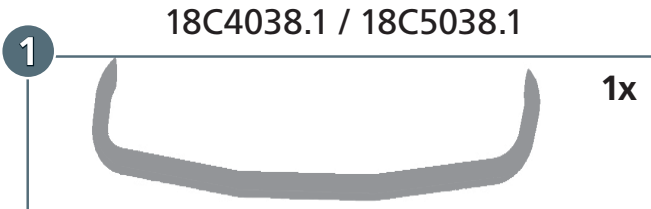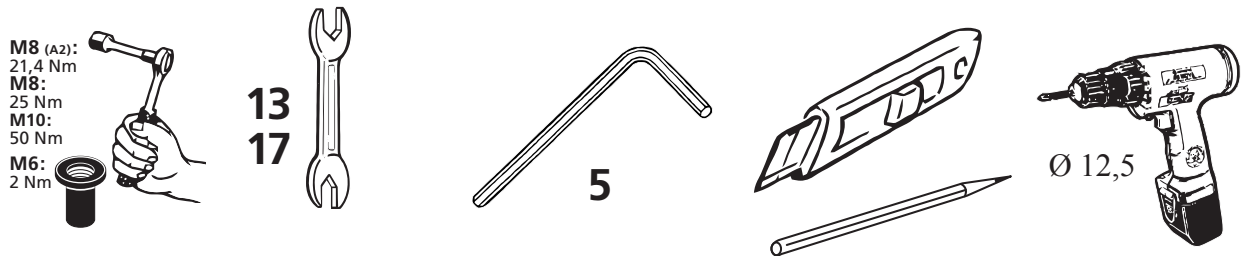

<b>a</b>		M6 x 30; DIN 912 A2	<b>2x</b>
<b>b</b>		M8 x 25; DIN 933 A2	<b>2x</b>
<b>c</b>		M10 x 30; DIN 933 Zn	<b>2x</b>
<b>d</b>		M8; DIN 934 Zn	<b>2x</b>
<b>e</b>		Ø 6; DIN 127 A2	<b>2x</b>
<b>f</b>		Ø 8; DIN 127 Zn	<b>2x</b>
<b>g</b>		Ø 8; DIN 127 A2	<b>2x</b>
<b>h</b>		Ø 10; DIN 127 Zn	<b>2x</b>
<b>i</b>		Ø 6,4; DIN 125 A2	<b>2x</b>
<b>j</b>		Ø 8,4; DIN 9021 Zn	<b>2x</b>
<b>k</b>		Ø 8,4; DIN 9021 A2	<b>2x</b>
<b>l</b>		Ø 10,5; DIN 9021 Zn	<b>2x</b>
<b>m</b>		Getowell M6	<b>2x</b>

